

INTERIOR SPACERS FOR BOXES

Many storage boxes require spacers to keep items from shifting or slumping inside the box. These spacers can be made quickly and covered with paper or cloth if necessary, but provide adequate support, uncovered.


TOOLS AND MATERIALS REQUIRED

Blue e-flute
Tyvek Tape or PVA
Board Shear/Paper Cutter/Utility Knife

Ruler
Pencil
Bone Folder

DIRECTIONS

- 1) Place the smaller materials in a corner of the box (along the front if box is a drop front format). Mark a piece of e-flute board according to the following measurements:

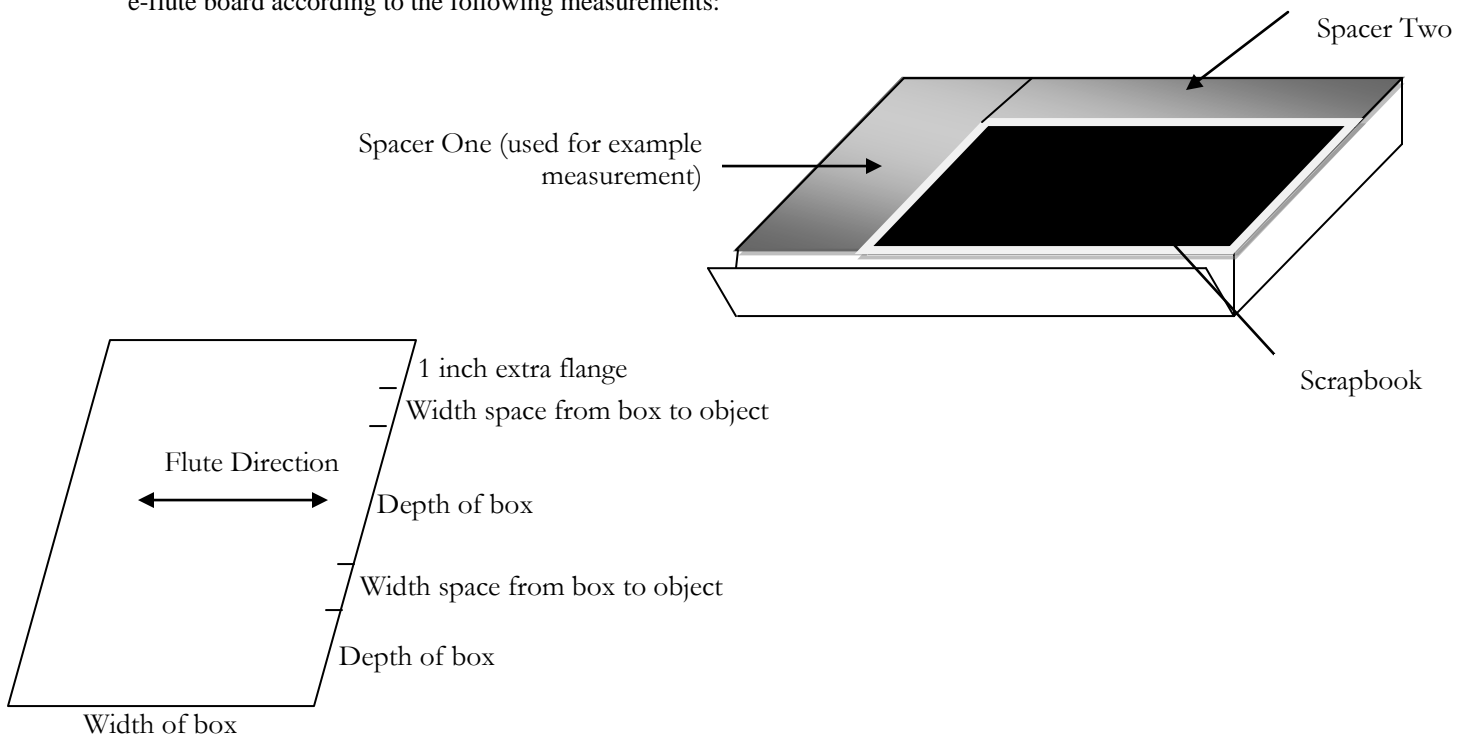

- 2) Cut the board to width and total length and crease the board at the determined points. If the measurement falls between flutes on the board, use the *smaller* of the two.
- 3) Make up into a square or rectangular-shaped tube. Secure the extra flange to the interior of the tube with Tyvek tape and burnish in place with a bone folder.
- 5) If desired, glue the spacer in place with PVA or tape applied to the back side of the spacer.
- 6) If a second spacer is necessary, follow the same procedure, to fill remainder of space.