

Metropolitan Museum of Art
Gas Chromatography- Mass Spectrometry (GC-MS) Results from Material Analysis

This document includes (1) a mass spectrum and (2) the volatile organic compounds (VOCs) emitted from samples using GC-MS analysis. The data is not interpreted; however, several classes of chemicals are highlighted because they are potential risks for artwork in an enclosed environment. A basic key, provided below, indicates those classes. The amount of each chemical identified has not been determined; similarly, it is not known how much of each chemical is necessary to do damage to art. Finally, peaks may be present that are the result of the sample adsorbing chemicals from the air and reemitting them during testing rather than being inherent to the sample. Research is ongoing to determine specifically which chemicals and amounts are required to negatively affect artifacts.

Highlighted data:

Pink – chemicals currently known to be hazardous to art

Green – amines; can raise the pH, are suspected to react with acids and may form crystals in an enclosed environment

Yellow – chemicals of the following type, which *may* be hazardous to art:

Acids – lower the pH, corrosive to metals, degrade organic materials

Aldehydes – can convert to acids with heat or exposure to UV light

Esters – can hydrolyze into acids with heat and humidity

Sulfur-containing compounds – known to tarnish and corrode some metals

Halogenated compounds – can become reactive with exposure to heat and UV light

Nitrogen-containing, not amine – can react with other off-gassed chemicals


Alkynes – can become reactive when exposed to heat or UV light

Sample: Marvelseal 470

Date collected: 1/11/2019

Oddy test result: Temporary

Technique used: SPME with a PDMS/DVB fiber; Agilent 7890B GC and 5977B MS fitted with a GL Sciences OPTIC-4 multimode inlet and LEAP PAL RTC autosampler; Pre-heated at 60°C for 20 minutes; fiber exposure at 60°C for 20 minutes; sample injected into 220°C inlet and cotrapped for 2 min at -15°C; GC ramped from 35°C to 225 °C at 7.5°C/min. Data analyzed in masshunter Qualitative. Samples > 90% match with a NIST 17.0 library are reported.

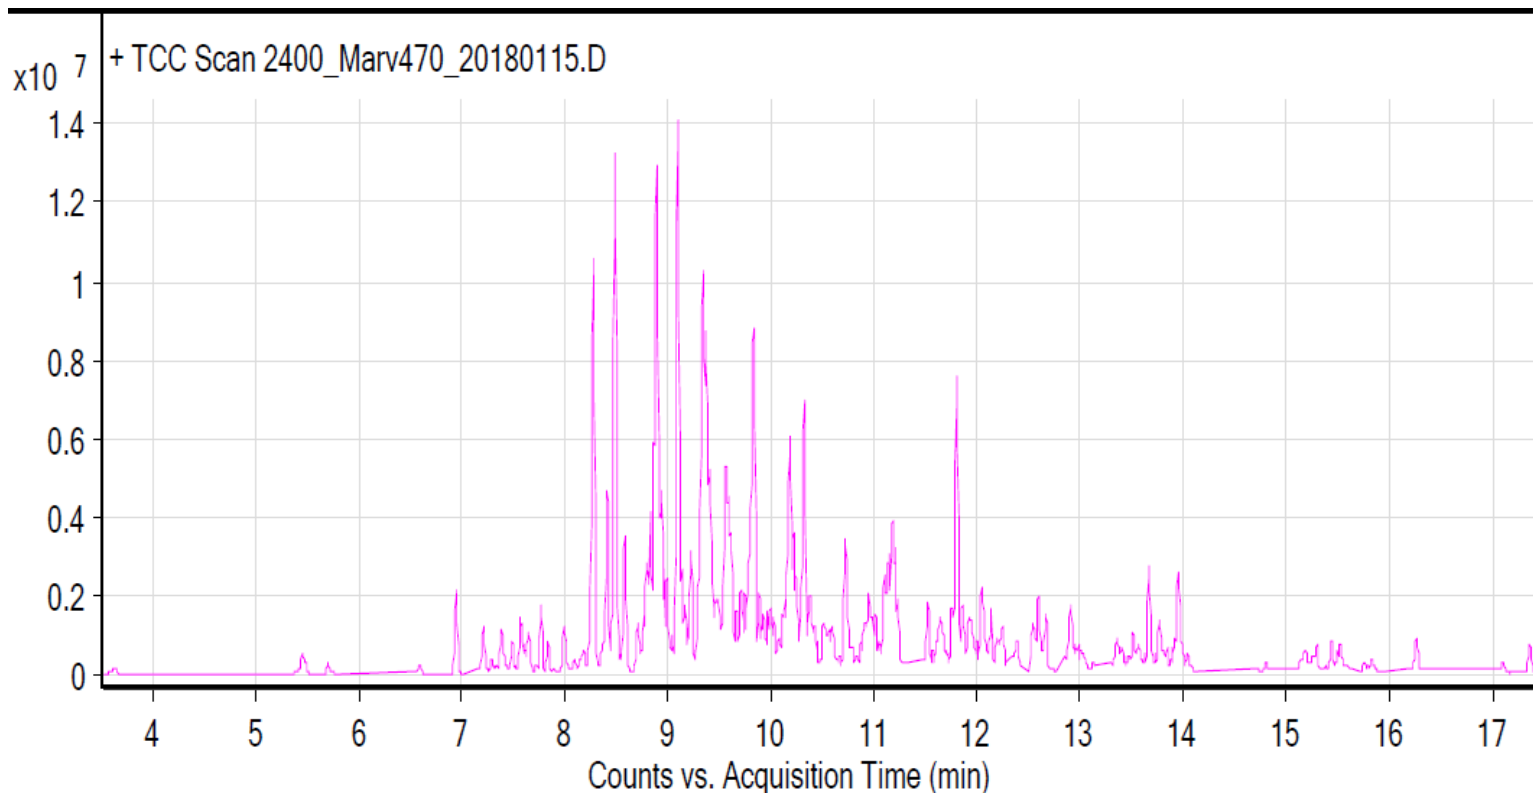

Compound Table

RT	Score (Lib)	Area	Name
6.94	91.51	3900832	Octane, 2,2,6-trimethyl-
7.38	92.51	2459735	Octane, 2,2,6-trimethyl-
7.49	90.79	1521648	2-Nonene, 3-methyl-, (E)-
7.58	92.02	2736221	Octane, 2,3,3-trimethyl-
7.77	93.68	3084727	Tridecane
7.99	92.99	2274340	HEPTANE, 2,2,4,6,6-PENTAMETHYL-
8.18	92.09	1033347	Hexacosane
8.28	92.55	21484538	Heptane, 2,2,4,6,6-pentamethyl-
8.41	93.25	10174864	Heptane, 2,2,4,6,6-pentamethyl-
8.49	90.13	27913372	Octane, 6-ethyl-2-methyl-
8.89	91.19	32497861	Nonane, 3-methyl-
9.22	92.05	5935040	Undecane, 3,6-dimethyl-
9.34	91.33	22131945	Dodecane, 4-methyl-
9.83	94.41	23841885	Undecane, 4,6-dimethyl-
9.88	92.12	826399	Dodecane
10.08	93.02	2345125	Undecane, 5-methyl-
10.72	90.88	4678793	5-Ethyldecane
11.52	91.78	3024202	5-Undecene, 3-methyl-, (E)-
11.8	94.84	12995312	Undecane, 4,7-dimethyl-
13.4	92.32	535453	3-ETHYL-PENTAN-2-OL

13.67	93.92	4839115	Undecane, 4,6-dimethyl-
15.3	91.26	527674	Cyclopentane, 1,1,3-trimethyl-
15.44	91.31	1362620	Undecane, 2,3-dimethyl-
17.11	98.1	633900	Neopentyl 2,2-dimethylpropanoate
17.37	94.75	1525729	Decane, 2,2-dimethyl-